

I'm not robot!

30 - Hydraulic System
15 - Control Valve
02 - L/R Arm

06 - L/R Arm
Remove and Install

Remove


1. Disconnect the hydraulic hoses from the control valve.
2. Disconnect the electrical wires from the control valve.
3. Disconnect the control valve from the machine.
4. Disconnect the control valve from the machine.

Install

1. Connect the hydraulic hoses to the control valve.
2. Connect the electrical wires to the control valve.
3. Connect the control valve to the machine.
4. Connect the control valve to the machine.

Figure 176

© 2014 JCB
30-16 10220001-1 30-16
www.jcb.com

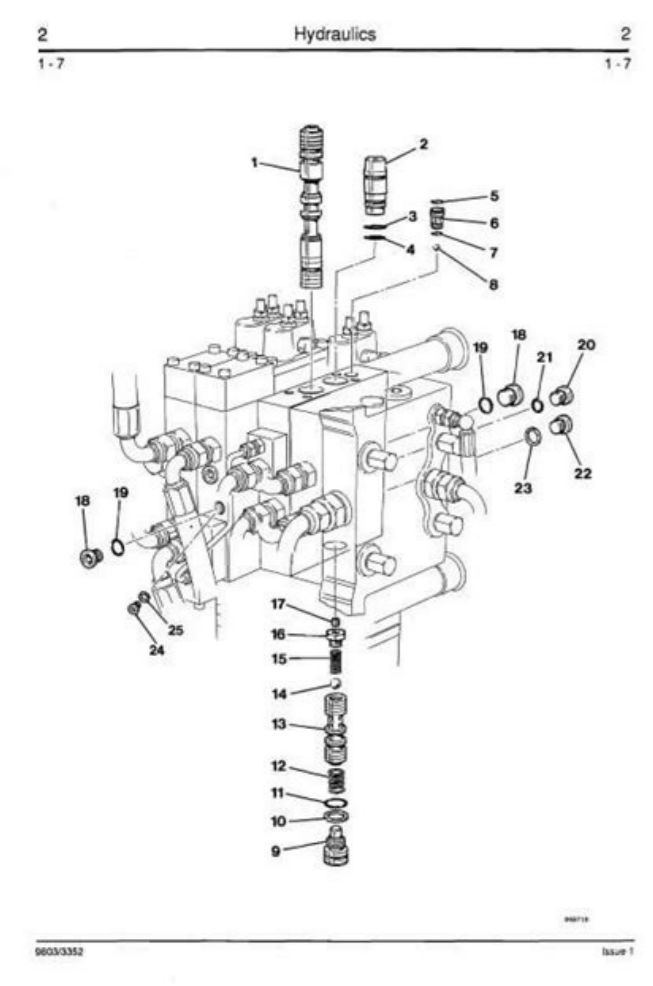

Service Manual Open front screen

8014, 8016, 8018

[Section 1 - General Information](#)
[Section 2 - Care and Safety](#)
[Section 3 - Maintenance](#)
[Section A - Attachments](#)
[Section B - Body and Framework](#)
[Section C - Electricals](#)
[Section D - Controls](#)
[Section E - Hydraulics](#)
[Section F - Gearboxes](#)
[Section J - Track and Running Gear](#)
[Section K - Engine](#)

717260

Publication No.
9803.9350-3

World Class Customer Support

Copyright © 2014 JCB. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior permission from JCB. 20140325

Issued by JCB Technical Publications, JCB Aftermarket Training, Stroud, Gloucestershire, G7 11 0TB, England, UK. Tel: +44 (0)1295 331227 Fax: +44 (0)1295 331400

INSTANT DOWNLOAD
JCB
Skid Steer Loader
 190, 190HF, 190T, 190THF, 1110, 1110HF, 1110T, 1110THF
Workshop Manual
 SERVICE | REPAIR | TROUBLESHOOT

